



PERADON

SINCE 1885



PERADON

SINCE 1885

Timesafe



 **PERADON**
Timesafe Luminaire
www.peradon.co.uk

Luminaire

Installation Instructions

INSTALLATION INSTRUCTIONS FOR TWIN LUMINAIRES

WE RECOMMEND THIS PRODUCT IS INSTALLED BY A SUITABLY QUALIFIED PERSON AND

ALL ELECTRICAL CONNECTION BE MADE BY A 17th EDITION QUALIFIED ELECTRICIAN

WARNING - THESE LUMINAIRES MUST BE EARTHED ,

CONTENTS

2x LUMINAIRES WITH REFLECTIVE LOUVRES
1x 2.5m 3 CORE CONNECTOR CABLE
2x BRASSED SCREW EYES
2x CONNECTING NUT AND BOLTS
1x 1.65m SUSPENSION BATTEN
6x SUSPENSION BATTEN SCREWS
1x 3 PIN MAINS CONNECTOR PLUG

TOOLS REQUIRED



ELECTRICIANS SCREWDRIVER
FLAT HEAD SCREWDRIVER
PHILIPS SCREWDRIVER
PLIERS


INSTRUCTIONS FOR JOINING AND HANGING TWIN LUMINAIRES

- 1) **IMPORTANT**-IF ASSEMBLING THE LUMINAIRES ON THE SNOOKER TABLE ENSURE TABLE IS PROTECTED WITH A HEAVY DUTY COVER.
- 2) CAREFULLY UNPACK YOUR TWIN LUMINAIRES, USING THE GLOVES SUPPLIED REMOVE THE REFLECTIVE LOUVRES AND STORE TO ONE SIDE (THESE ARE VERY DELICATE AND SHOULD BE HANDLED WITH GREAT CARE) REMOVE THE TUBES ALSO AND STORE TO ONE SIDE.
- 3) PLACE THE LUMINAIRES FACE UP END TO END, FITTING THE 2 CONNECTING NUTS AND BOLTS AS SHOWN ON THE DIAGRAM AND TIGHTEN TOGETHER.
- 4) PLACE THE CONNECTING SUSPENSION BATTEN CENTRALLY UNDER THE TWIN LUMINAIRES USE THE CENTRE LINE GUIDE TO POSITION THE BATTEN. **IMPORTANT** -ENSURE IT IS EQUAL DISTANCE FROM END TO END. USING THE SCREWS PROVIDED, SCREW THE BATTEN SECURELY FROM INSIDE THE LUMINAIRES. THE TWIN LUMINAIRES SHOULD NOW BE JOINED TOGETHER.
- 5) USING THE 2.5M CABLE (SUPPLIED) CONNECT TO THE LUMINAIRE THAT THE MAINS POWER SUPPLY **DOESN'T GO TO** USING THE INTERNAL CONNECTOR BLOCK i.e. **BROWN LIVE, BLUE NEUTRAL, GREEN/YELLOW EARTH**. ONCE THE WIRING IS COMPLETE, CONNECT THE MAINS SUPPLY CABLE THROUGH THE CABLE ENTRY HOLE.
- 6) INSERT THE TUBES INTO THE HOLDERS AND ROTATE THROUGH 90 DEGREES TO SECURE.
- 7) REFITTING THE ALUMINIUM LOUVRES. **THEY MUST BE EARTH**. THIS IS DONE BY USING THE EARTH LEAD RETAINED NEAR THE CENTRE OF THE BODY BY A SCREW AND THE OTHER END ATTACHED BY A SPADE TO THE LOUVRE.

- 8) ONCE THE LOUVRES HAVE BEEN CAREFULLY REFITTED THE TWIN LUMINAIRES CAN NOW BE HUNG OVER THE TABLE. TURNING THE LUMINAIRES FACE DOWN ON THE TABLE, FIT THE SCREW EYES APPROXIMATELY 50mm / 2" IN FROM EACH END OF THE SUSPENSION BATTEN THE LUMINAIRE NEEDS TO HANG AT A HEIGHT OF BETWEEN 1220mm AND 1550mm FROM THE SURFACE OF THE TABLE TO GIVE OPTIMUM PERFORMANCE.
- 9) NOW FINALLY CONNECT TO THE MAINS SUPPLY USING THE 3 PIN CONNECTOR PLUG.

ASSEMBLY DIAGRAMS

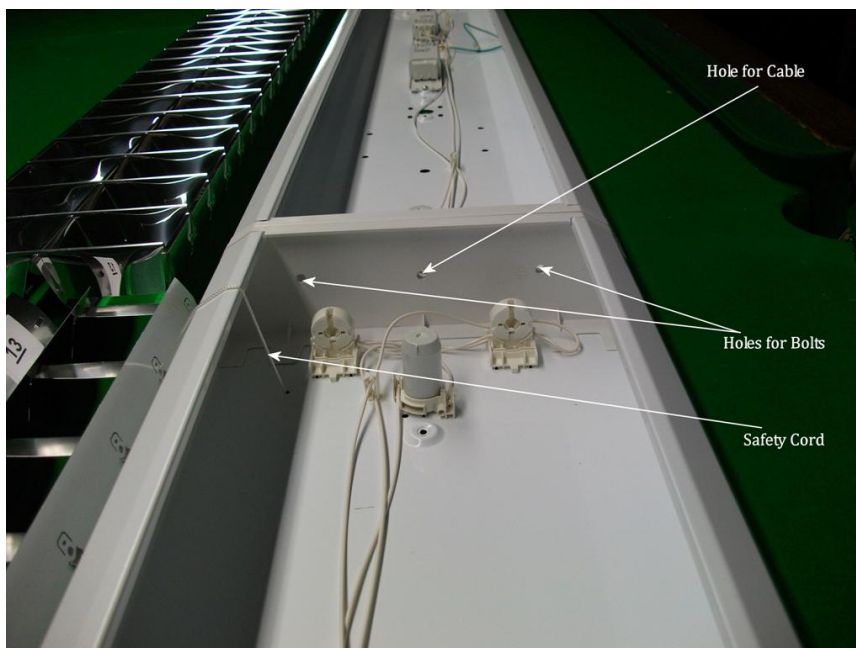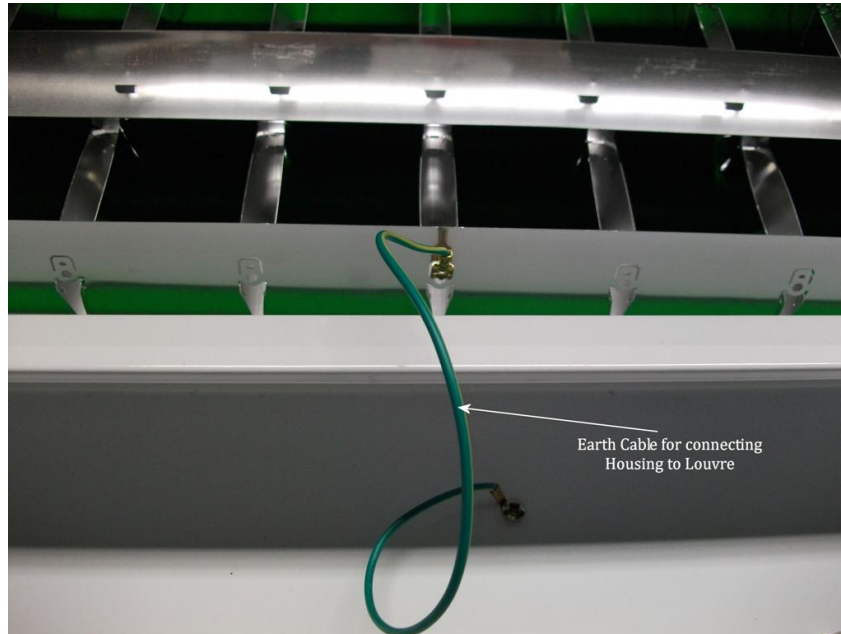

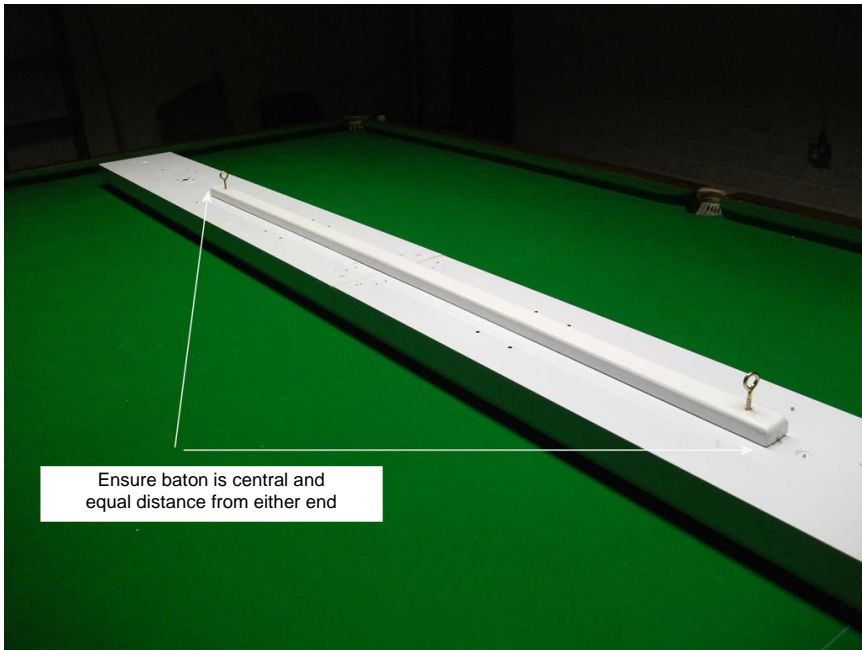

128 Richmond Row

Liverpool
L3 3BL

www.peradon.co.uk
peradon@eaclare.co.uk